


CMP SHROUD INSTALLATION

SECURING CABLES WORLDWIDE



1. Measure the cable diameter and find the required size on the shroud.

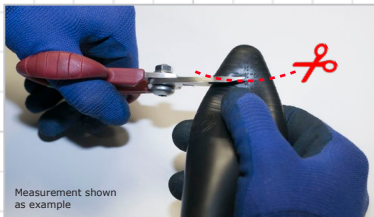

Measurement shown
as example

2. Flatten the shroud and cut along the now curved measurement line using scissors or a safety knife.

If required cut between the lines to achieve the correct measurement.



3.a Push the shroud down the cable with the wide end facing where the cable gland will be installed.

3.b Install the cable gland as per CMP fitting instructions.



4. Fit the shroud over the installed cable gland ensuring a tight fit against the equipment.

CMP Products Limited
36 Nelson Way,
Nelson Park East,
Cramlington,
Northumberland,
NE23 1WH

T: +44 191 2657411
E: customerservices@cmp-products.com
W: www.cmp-products.com

